

1. ImageMaster USB camera setting in Patterson EagleSoft

Go to **File** → **Preference** → **X-ray** → **Video** → *Capture Card → **“Standard Windows Driver Model Device”**
*Default Device → **“ImageMaster USB”** or **“USB Video Device”** for Windows XP
Then Click on **Save** and **Ok**.

